


KOOIJ

KOOIJ BV
KANONNENLOODS 24
1505RX ZAANDAM
THE NETHERLANDS

OFFICE@KOOIJ.COM
KOOIJ.COM

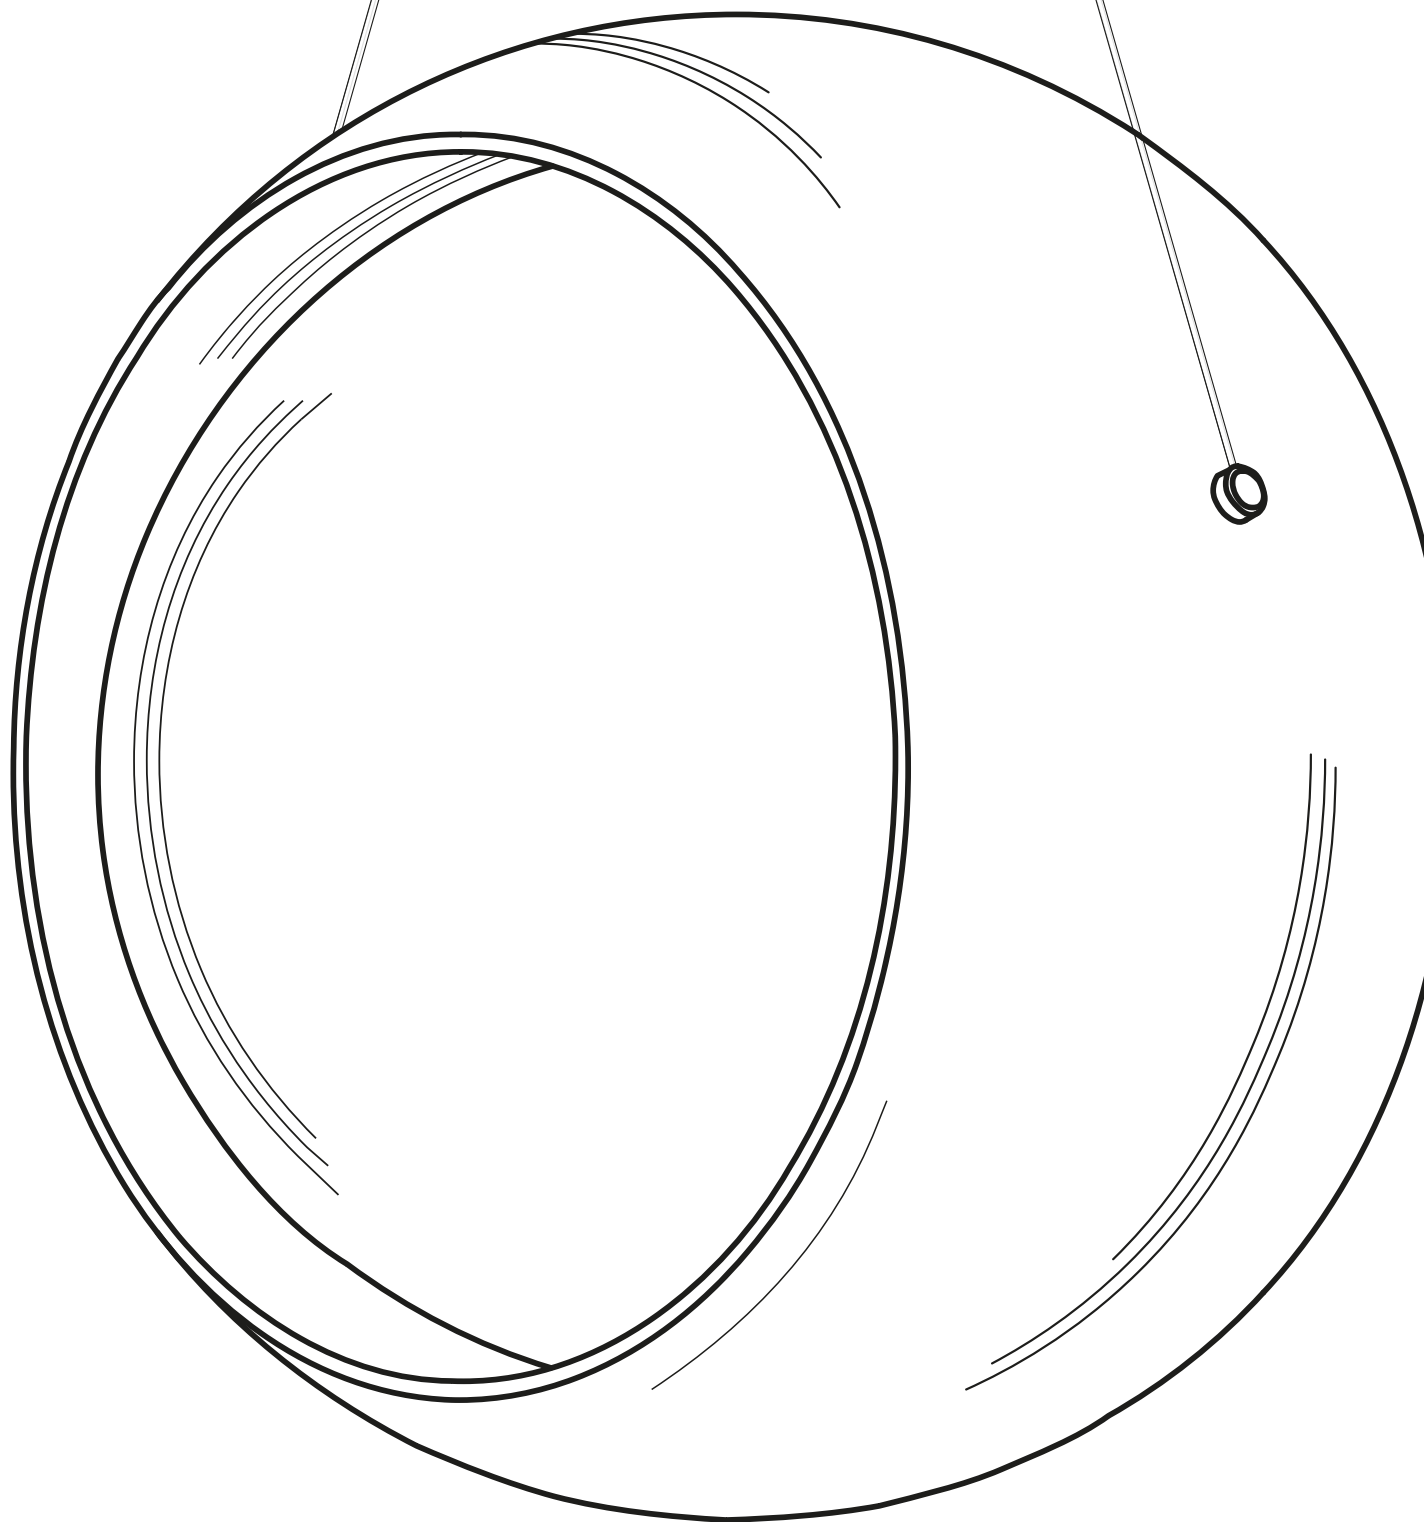

Helm


INSTALLATION INSTRUCTIONS

Helm

INSTALLATION INSTRUCTIONS

OVERVIEW


- ① Canopy
- ② Helm
- ③ Steel wires (2x)

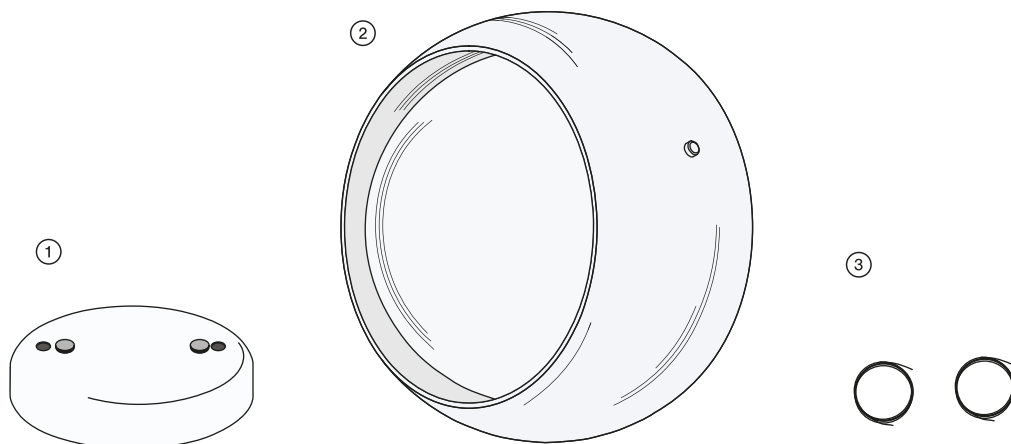

TOOLS & HARDWARE

(Items below are not included)


- ① Wire cutters
- ② Flathead screwdriver
- ③ Hex key
- ④ Screws and plugs
(Suitable for ceiling type & weight)

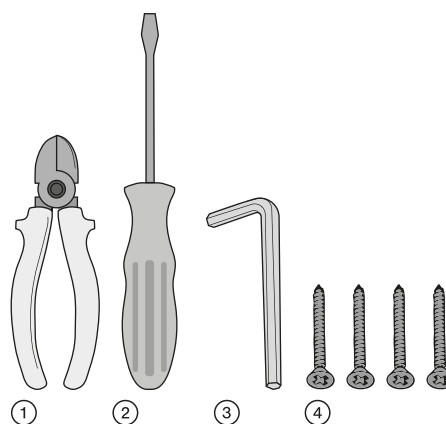

We recommend having two people to assemble the Helm to support parts during assembly.


① REMOVE THE COVER OF THE CANOPY

Remove the cover from the canopy (1) by unscrewing the two large screws on top. Then, slide the cover over the fixture inside.

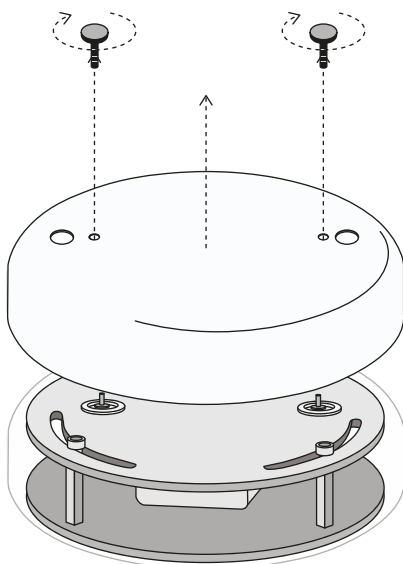

② UNSCREW THE BOLTS


Remove the upper part of the fixture by unscrewing the three bolts on top using a hex key.

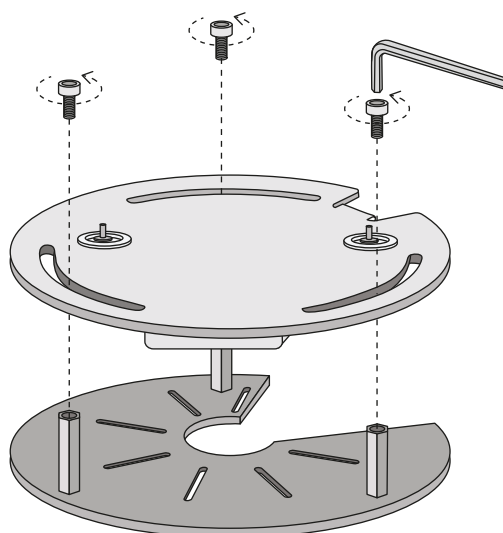

3 ATTACH FIXTURE TO THE CEILING


Attach the upper part of the fixture to the ceiling using suitable plugs and screws for your ceiling type. Ensure that the main wiring from the ceiling is centered within the fixture.

Note: screws are not included—use screws and plugs appropriate for your ceiling.

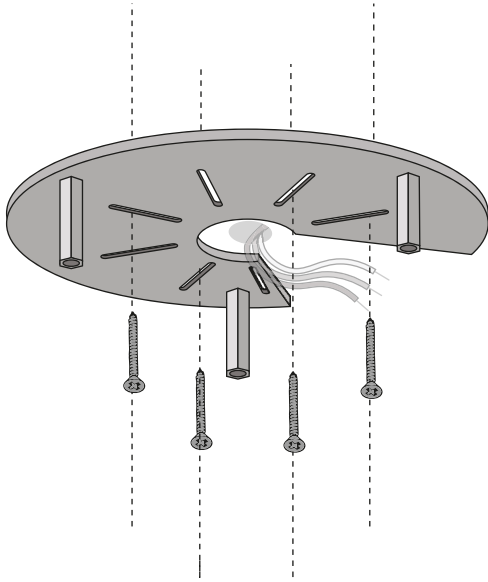


4 SCREW FIXTURE BACK TOGETHER

Using the same three bolts, screw the fixture back together using a hex key. Make sure the opening in the upper part aligns with the part that holds the white terminal block, as shown in the drawing below.

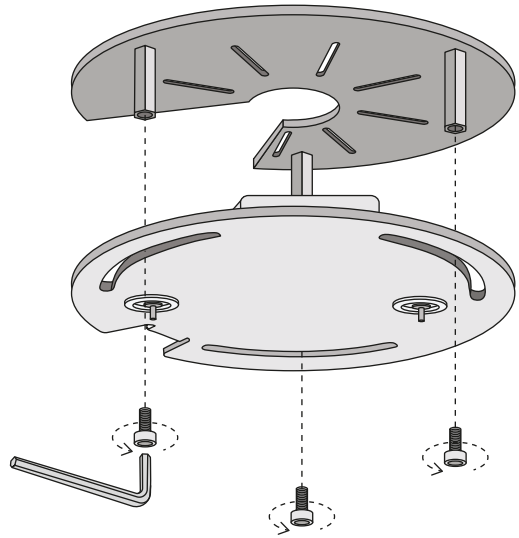


5 THREAD THE CABLES THROUGH THE HELM

Thread the steel cables (3) through the holes in the metal fixtures on both sides of the Helm (2). Take note of the “+” and “-” stickers on the fixtures, as these will be important later.

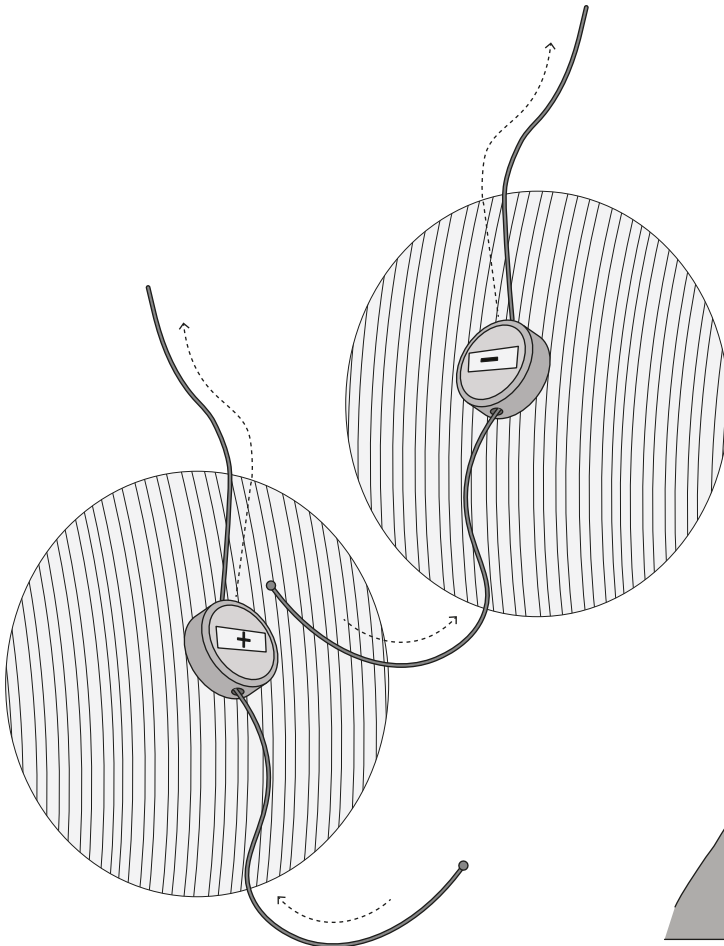


6 HOLD UP THE HELM

Have one person hold the helm at the correct height beneath the ceiling, or find another way to support it while determining the length of the cords.

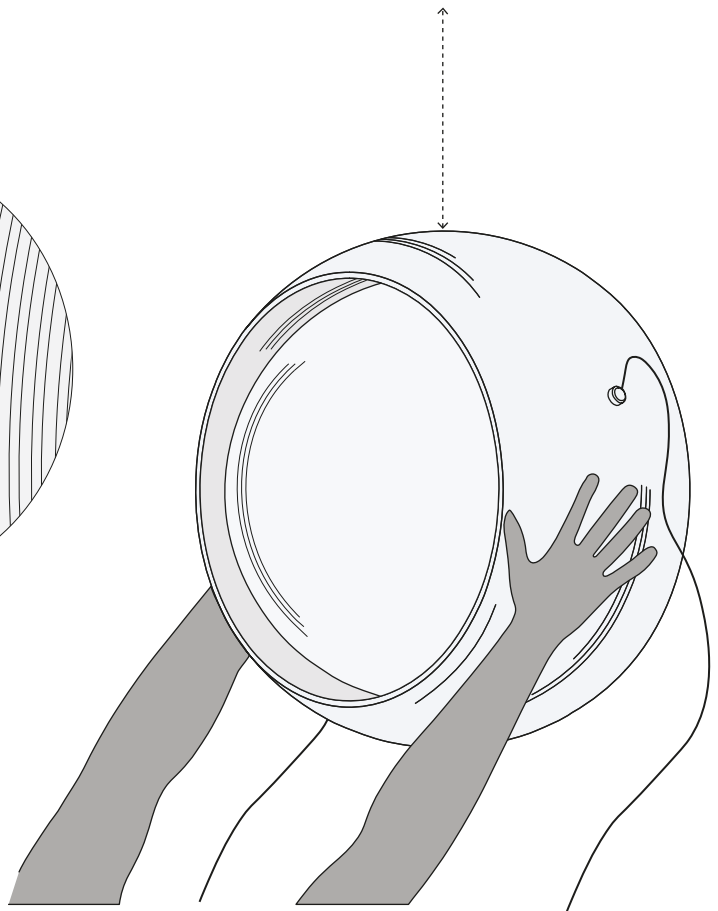



7 THREAD THE CABLES THROUGH THE CANOPY

Thread the steel cables through the canopy cover and the springs on the fixture. Make sure the “+” and “-” sides are correctly aligned. Inside the fixture, the red cable attached to the spring indicates the positive side, and the black cable the negative.

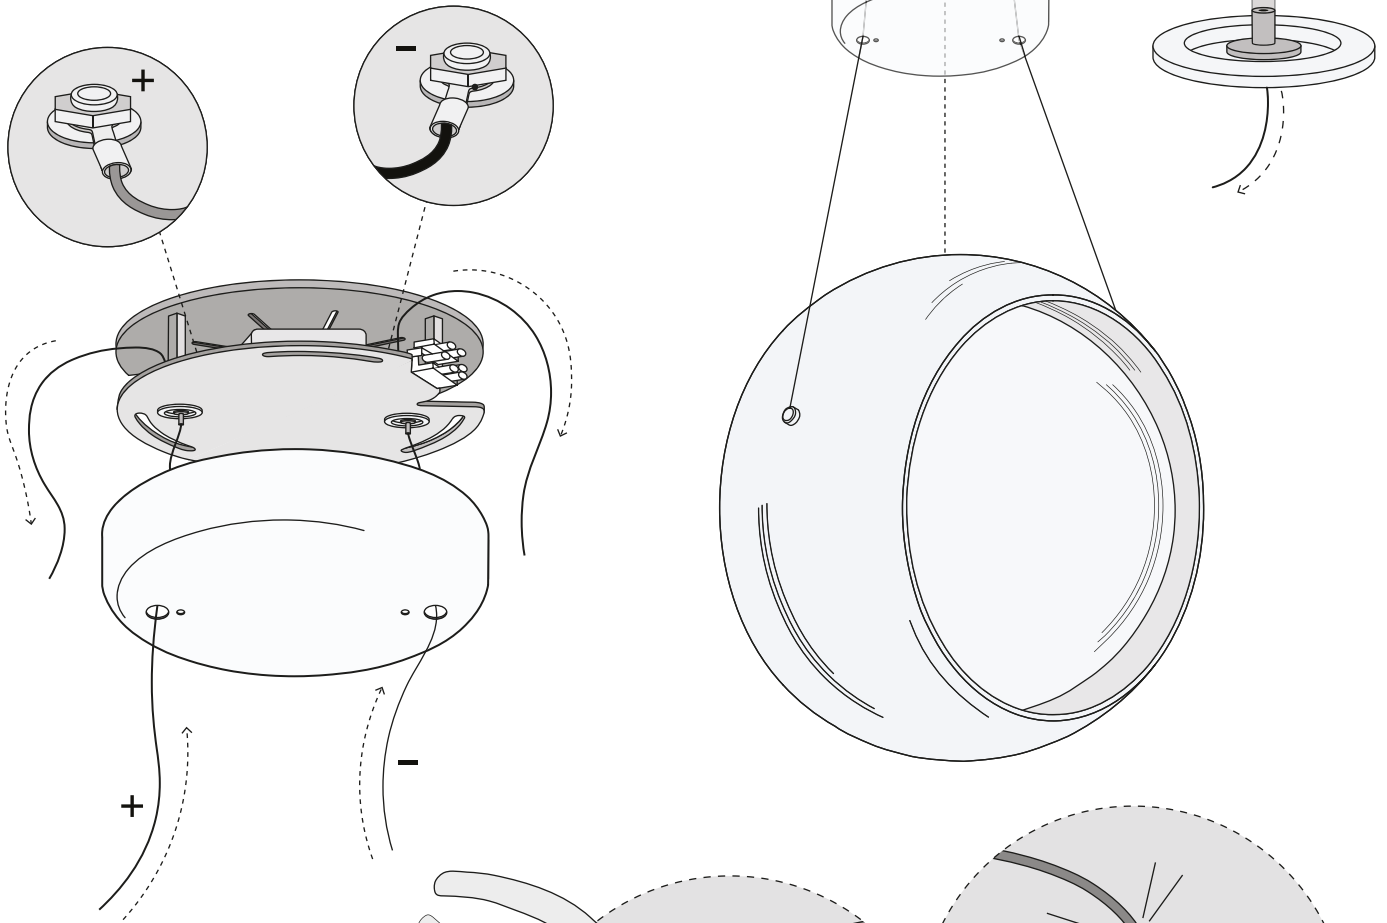

8 CUT THE CORDS


By pressing the spring locks, the cable can move freely, allowing you to adjust it. When the helm is hanging straight at the correct height, the remaining steel cable can be cut as shown in the image on the right. Leave 2-3 cm of extra wire in case small adjustments are needed. It is important that the remaining steel wire does not touch the upper part of the fixture, as this could cause a short circuit.

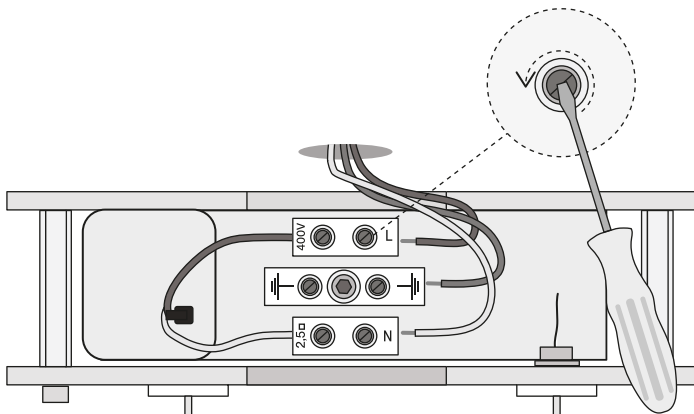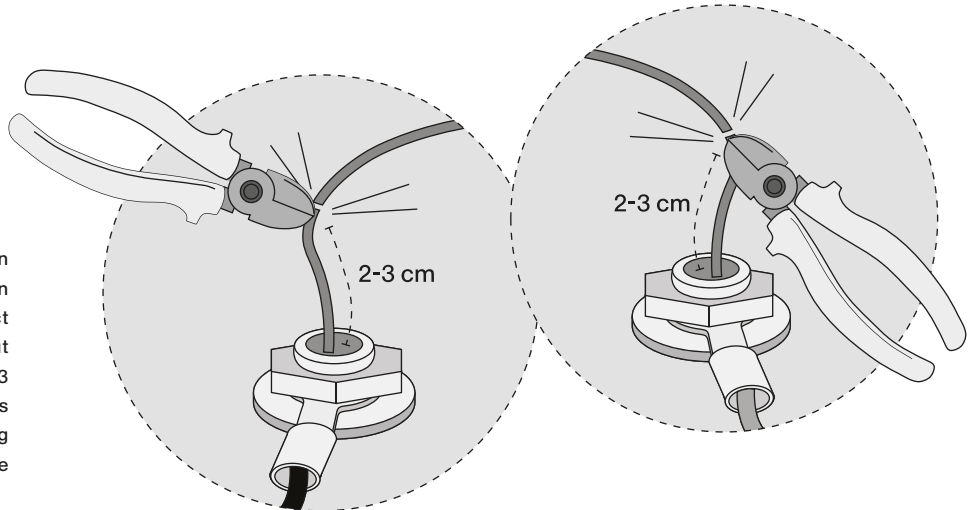

9 CONNECT YOUR MAIN WIRING


Warning: Always switch off the electricity at the main circuit breaker before starting any electrical work.

Connect your main wiring as usual (L, N, and G) by loosening the screws on the terminal block with a flat-head screwdriver. Insert the wires, then tighten the screws to secure them.

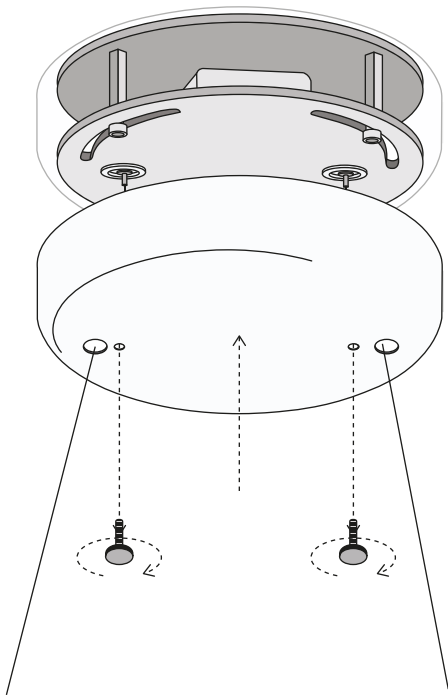

10 PLACE THE COVER OF THE CANOPY BACK


Place the canopy cover over the ceiling fixture and secure it with the two bolts. Make sure all wiring is safely tucked inside the canopy. Your Helm should now be hanging and functioning properly.

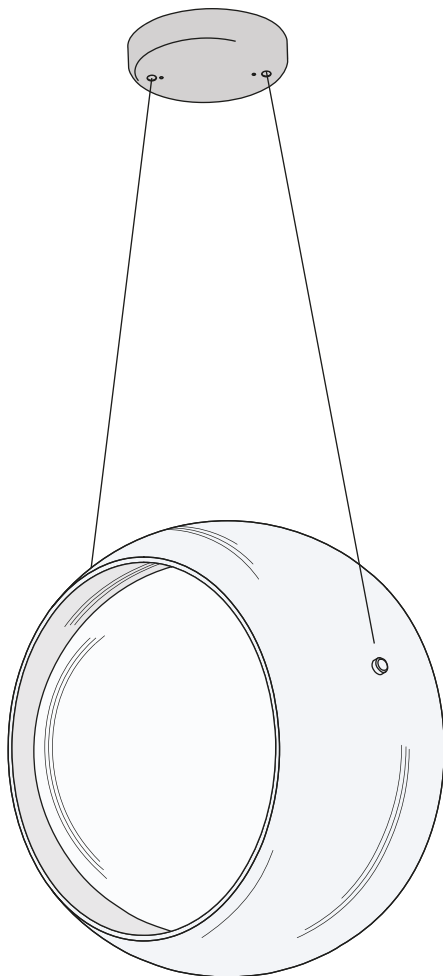


TROUBLESHOOTING

If your Helm is not working, please check the following:

- 1 Check if your wiring is set up correctly.

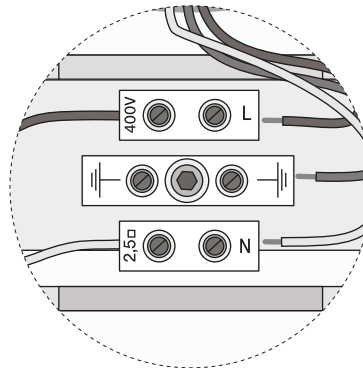

- 2 The remaining part of the steel cable that you cut cannot touch the upper part of the fixture, as this can cause a short circuit.

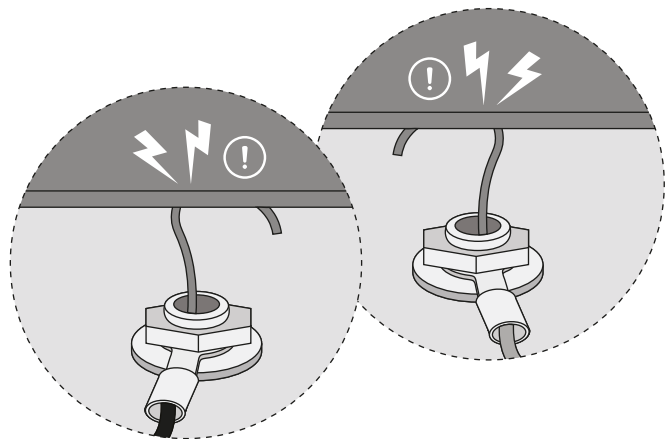

- 3 Check if the “-” and “+” sides indicated on the fixtures of the Helm are correctly matched with the red (+) and black (-) cables in the fixture. Press the spring fixtures on your Helm to release the cables and rotate the Helm to match the positive and negative sides.

