


**KO
OIJ**

KOOIJ BV
KANONNENLOODS 24
1505RX ZAANDAM
THE NETHERLANDS

OFFICE@KOOIJ.COM
KOOIJ.COM

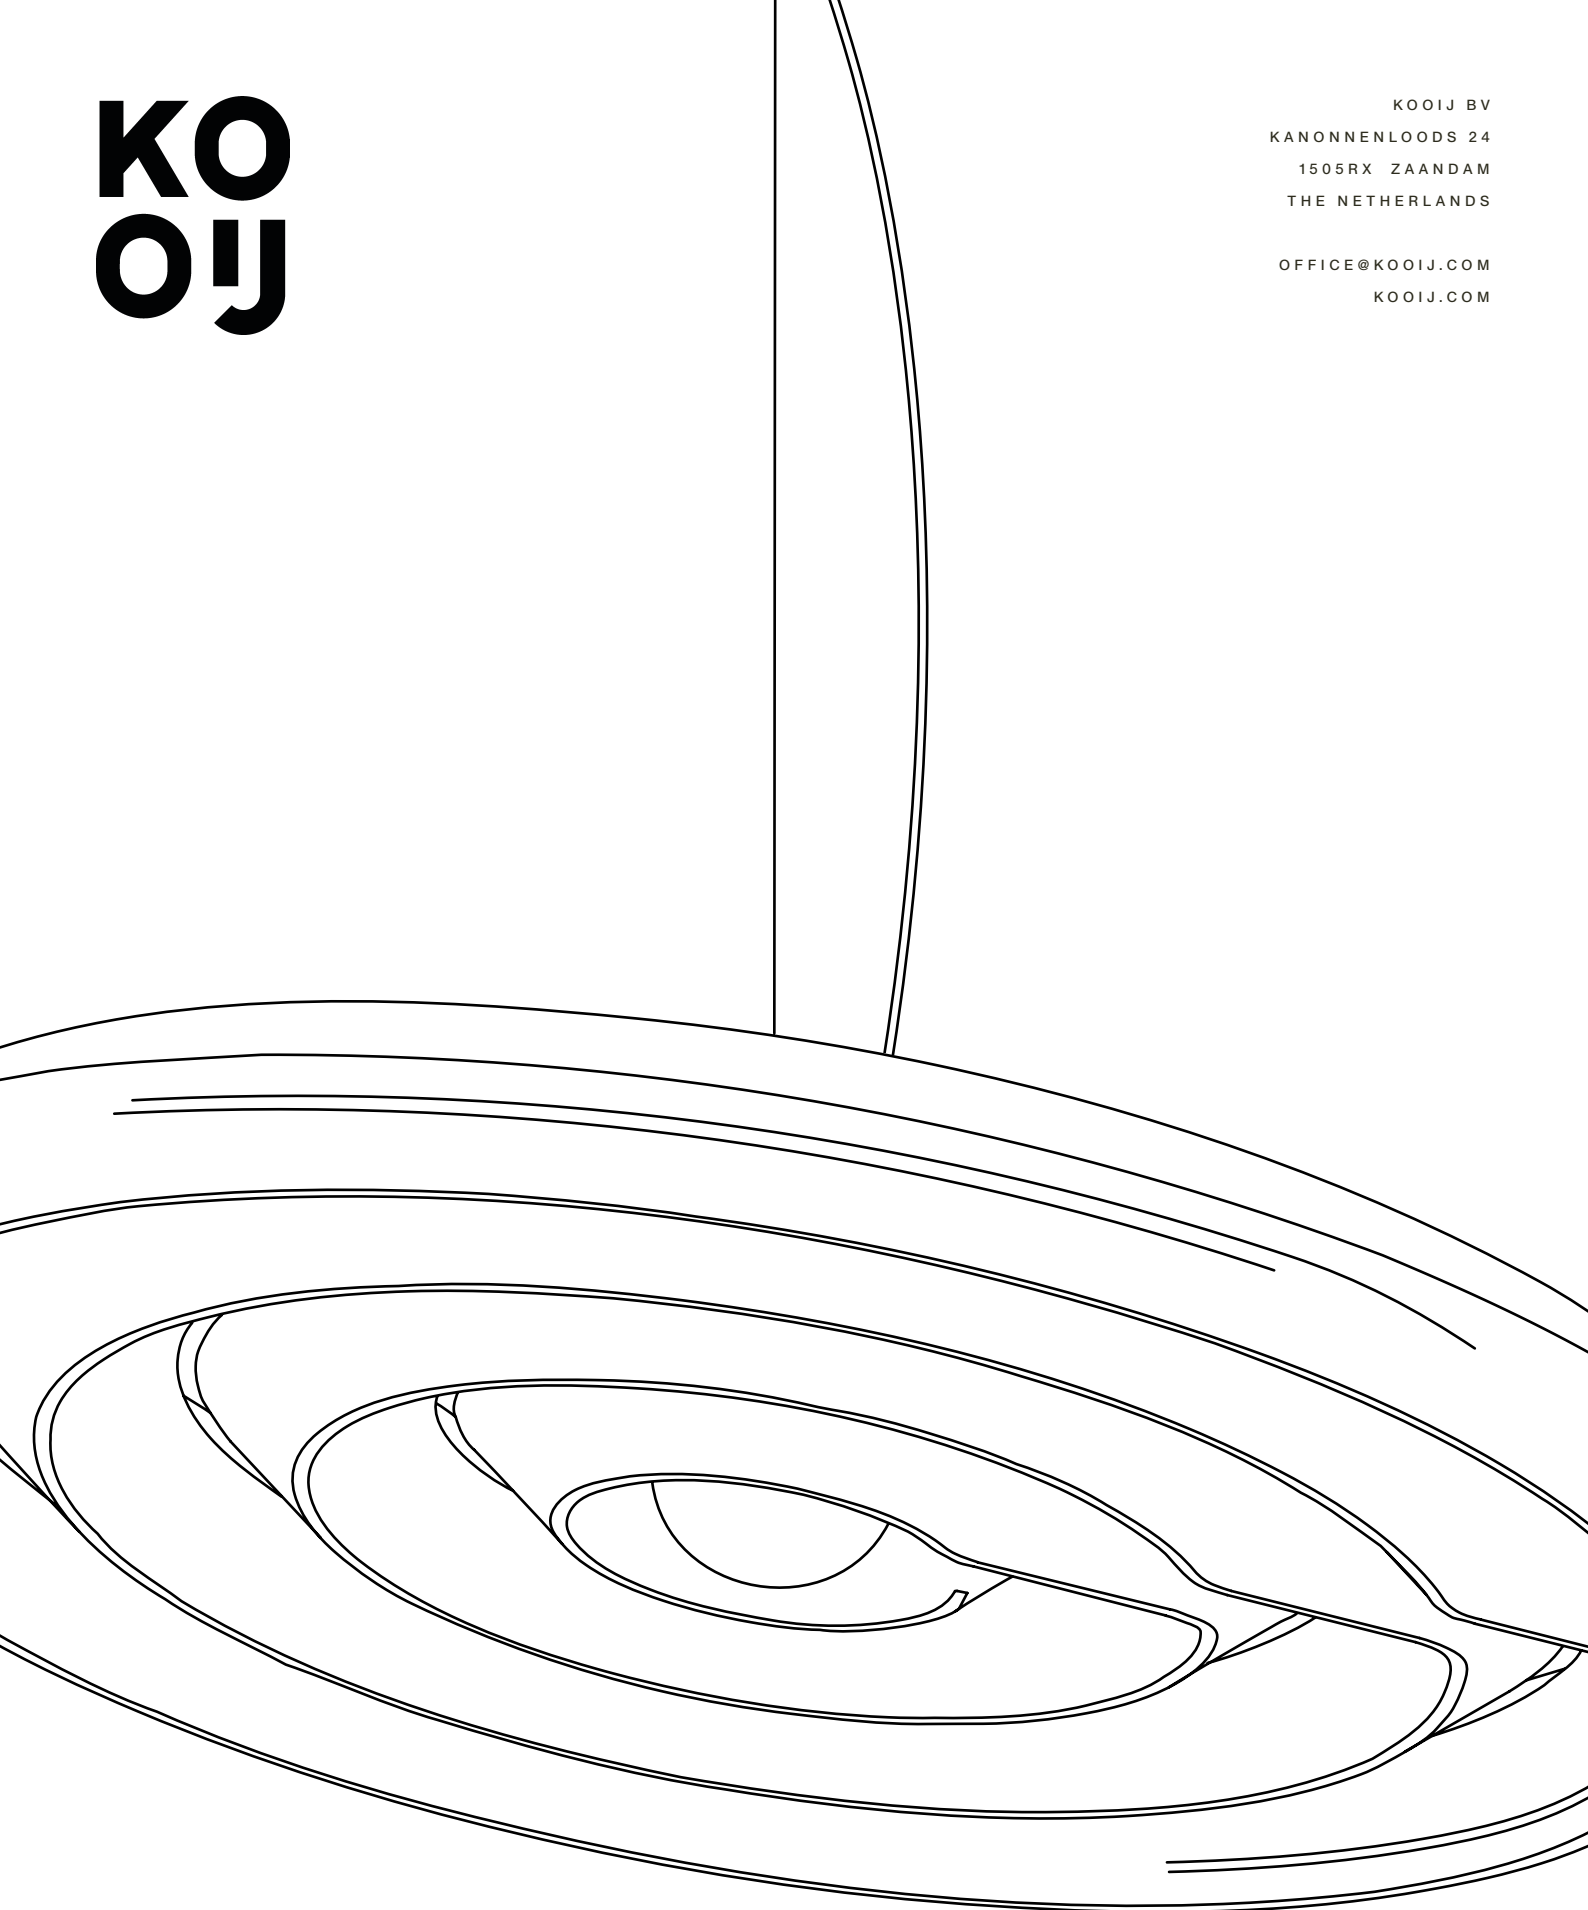


Fresnel pendant

INSTALLATION INSTRUCTIONS

Fresnel pendant

INSTALLATION INSTRUCTIONS


OVERVIEW

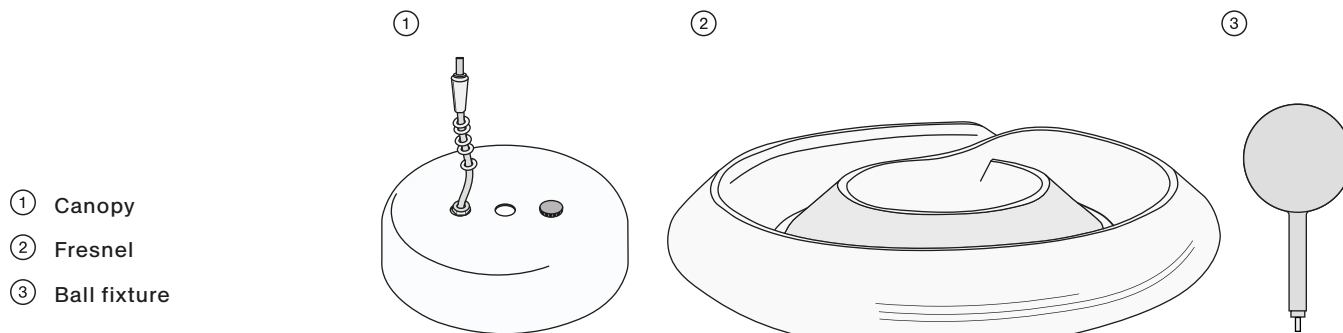

TOOLS & HARDWARE


(Items below are not included)

- ① Wire cutters
- ② Flathead screwdriver
- ③ cross-head screwdriver
- ④ Hex key
- ⑤ Screws and plugs
(Suitable for ceiling type & weight)

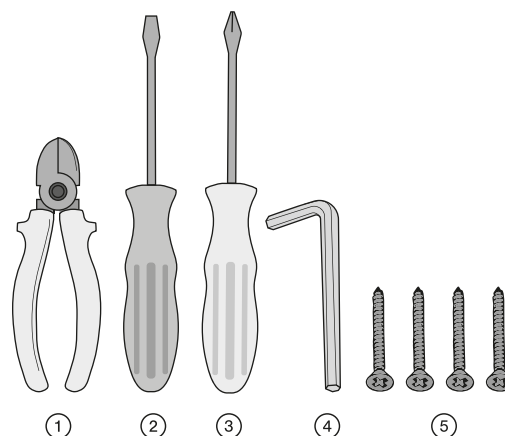


1 REMOVE THE COVER OF THE CANOPY

Remove the cover from the canopy by unscrewing the large screw on top. Then, slide the cover over the cord.

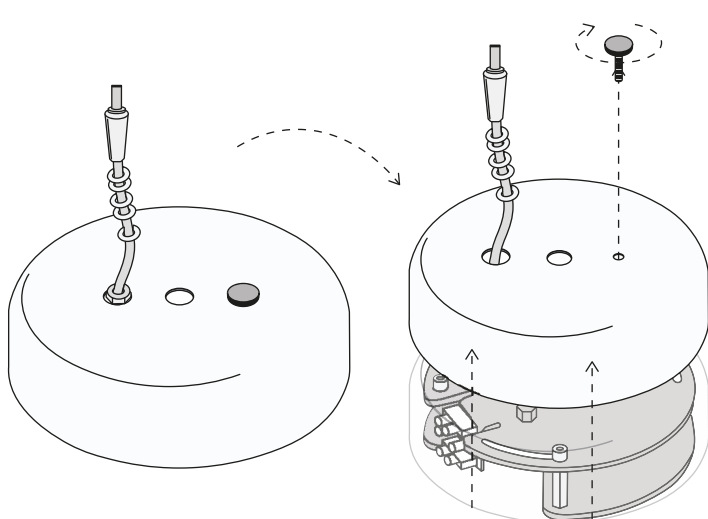

2 UNSCREW THE BOLTS


Remove the upper part of the fixture by unscrewing the three bolts on top using a hex key.

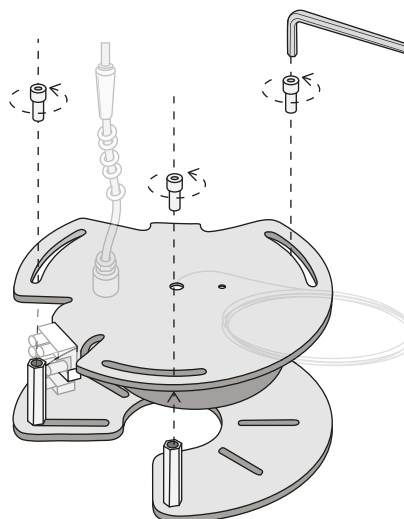

3 ATTACH FIXTURE TO CEILING


Attach the upper part of the fixture to the ceiling using suitable plugs and screws for your ceiling type. Ensure that the main wiring on the ceiling is centered within the fixture.

Note: screws are not included—use screws and plugs appropriate for your ceiling.

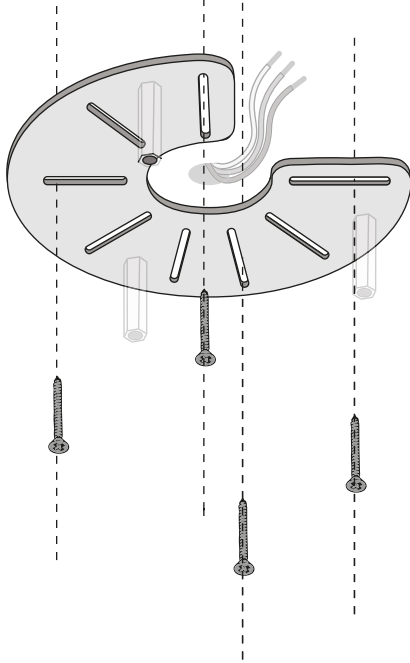


4 ADD LENGTH TO CORD

Take the other side of the fixture and remove the rubber band wrapped around the lamp's cord. Extend the cord to the desired length, allowing a few extra centimeters so it can meander freely along the steel cable later. Use the rubber band to tie the remaining cord back together.

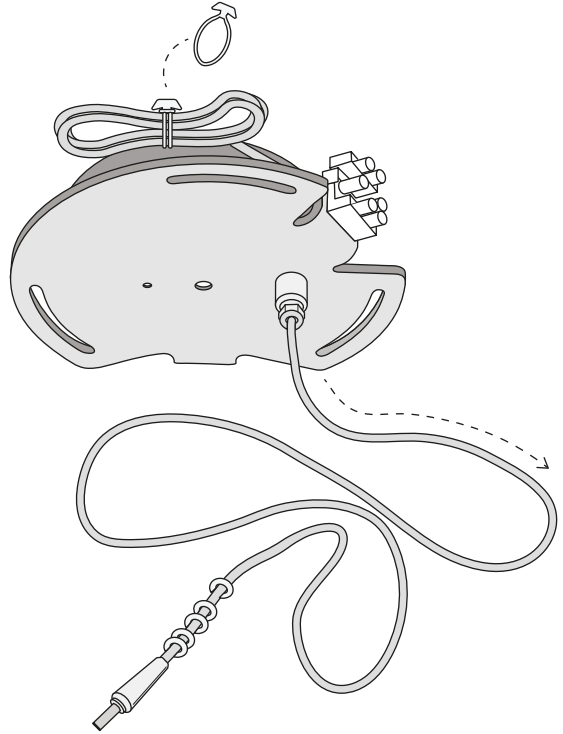


5 UNTIE THE STEEL CABLE

Remove the tie wrap from the steel cable. There is no need to cut the cable to length—this will be adjusted later using the ball fixture.

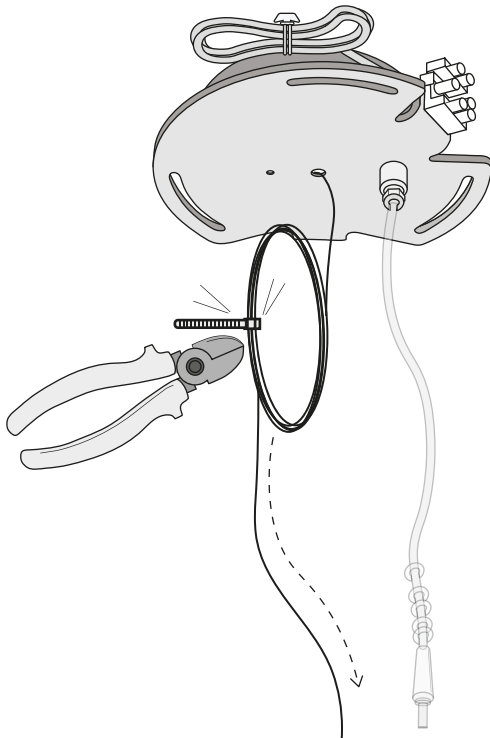

6 SCREW FIXTURE BACK TOGETHER

Using the same three bolts, screw the fixture back together using a hex key. Make sure the opening in the upper part aligns with the part that holds the white terminal block, as shown in the drawing below. Make sure the remaining cord is stored neatly between the two parts again.

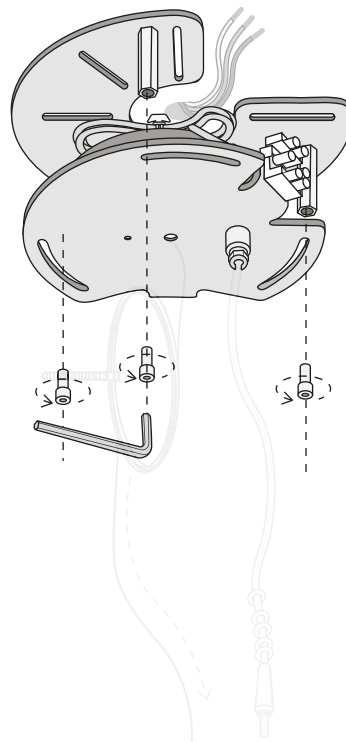

7 CONNECT MAIN WIRING



Warning: Always switch off the electricity at the main circuit breaker before starting any electrical work.

Connect your main wiring as usual (L, N, and G) by loosening the screws on the terminal block with a cross-head screwdriver. Insert the wires, then tighten the screws to secure them.

LIVE (L)
Brown


GROUND (G)
Green

NEUTRAL (N)
Blue

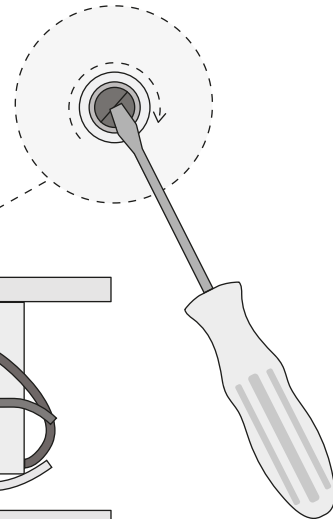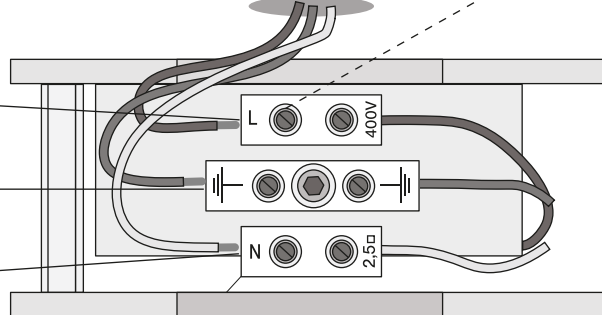

DIM-
Pink


DIM+
Purple

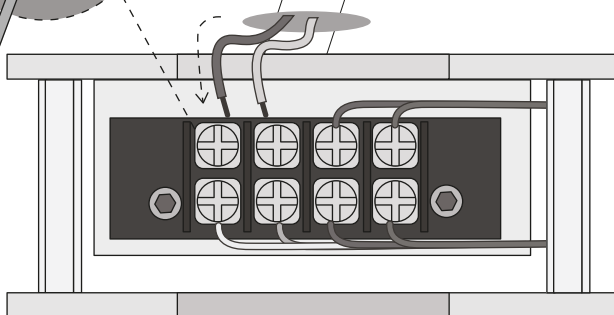

8 CONNECT WIRING FOR DIMMING

Warning: Always switch off the electricity at the main circuit breaker before starting any electrical work.

To enable dimming, connect the two dimming control wires to the black terminal block on the opposite side (0–10V, PWM, or resistance), depending on your setup.

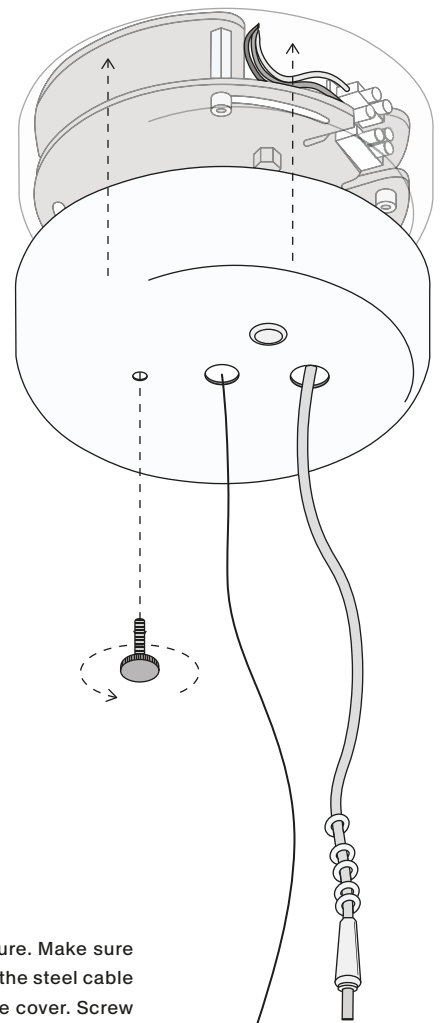


9 PLACE COVER OF FIXTURE

Place the canopy cover back over the fixture. Make sure all wiring is safely tucked in, and that both the steel cable and the cord pass through the holes in the cover. Screw the cover back in place using the large screw.

10 ATTACH STEEL CABLE TO CORD

Thread the steel cable through the small transparent rubber rings on the cord to secure them together.

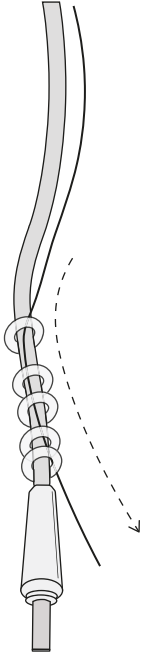


11 HANG THE FRESNEL

Now, thread the steel cable through the Fresnel and into the opening of the spring-loaded ball fixture. This fixture uses a spring mechanism that allows the cable to slide freely in when pushed down, but locks it securely in place to prevent the cable from sliding back out.

To adjust the cable length or make it longer, press down on the spring-loaded ball to release the grip, then pull the cable through freely.

Insert the steel cable into the ball fixture until it reaches the desired height. Make sure the ball fixture securely holds the cable before hanging the weight of the Fresnel on it.

Finally, connect the power cord to the back of the Fresnel.

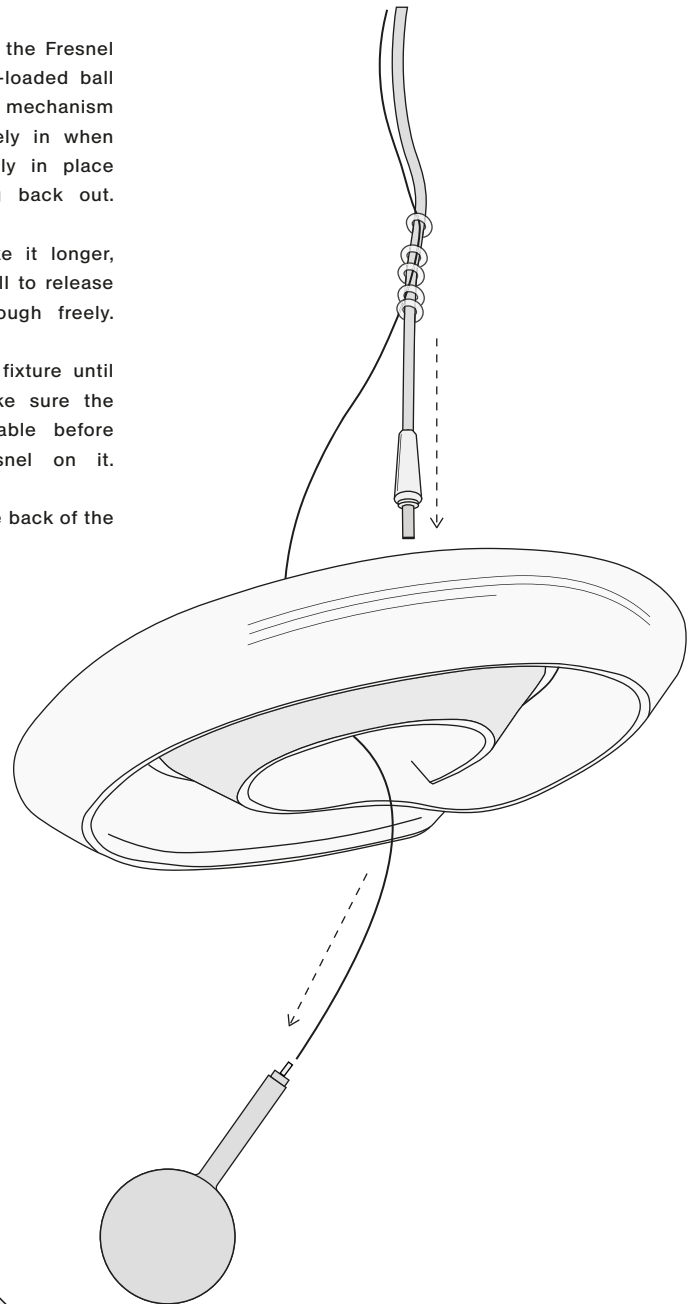

12 ADJUST ANGLE MANUALLY

The Fresnel has a felt ring that creates enough friction to hold it securely on the ball fixture at any angle. Manually adjust the Fresnel to the desired angle.

