


KOOIJ

KOOIJ BV
KANONNENLOODS 24
1505RX ZAANDAM
THE NETHERLANDS

OFFICE@KOOIJ.COM
KOOIJ.COM

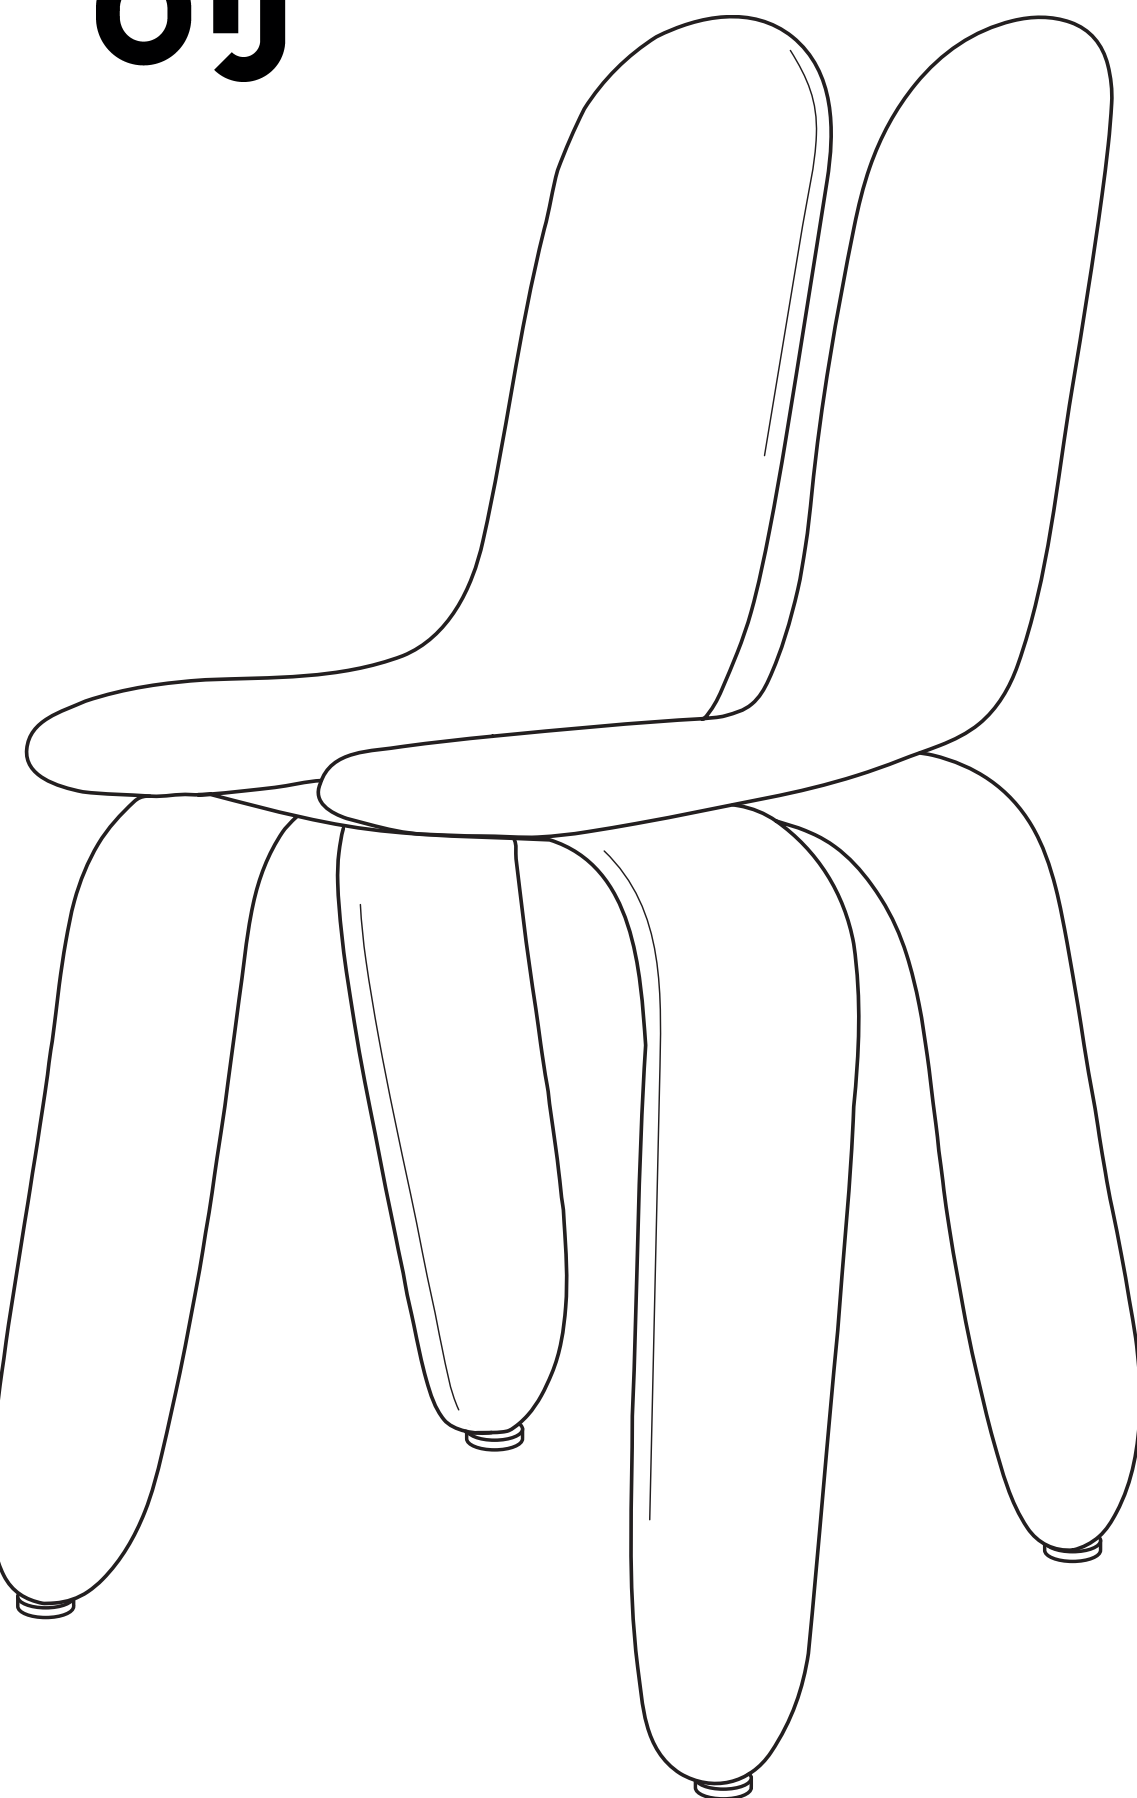

Row


INSTALLATION INSTRUCTIONS

Row

INSTALLATION INSTRUCTIONS

OVERVIEW

- ① Back rest (2x)
- ② Legs (2x)
- ③ Washers (8x)
- ④ Nuts (8x)

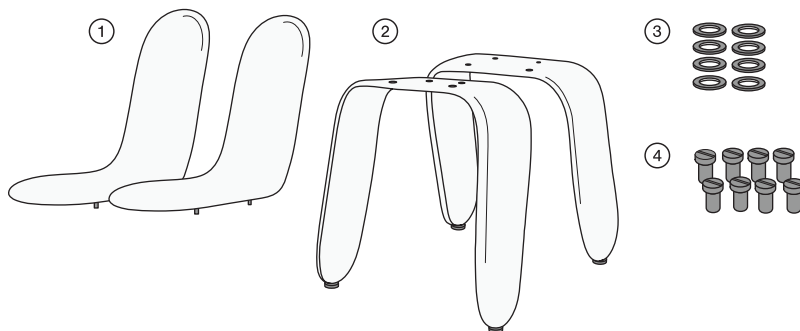

TOOLS & HARDWARE


(Items below are not included)

Flathead screwdriver



1 PLACE THE ROW ON ITS SIDE


Position the backrests (2) on their sides on a soft, flat surface like a blanket. Insert the protruding screws of the backrests (1) through the corresponding holes in the legs (2). There are "O" markings on the parts to guide alignment.

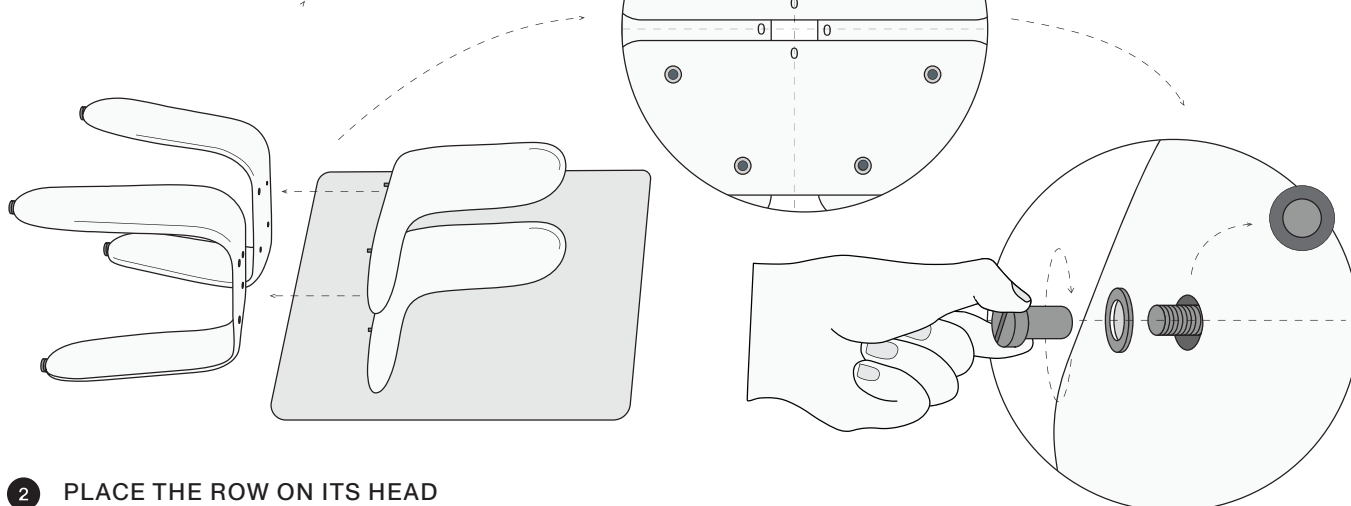

Use these markings to correctly position the parts as shown on the left. Loosely attach a washer (3) and nut (4) by hand. While tightening, make sure the screw is centered in the hole for proper alignment.

2 PLACE THE ROW ON ITS HEAD

To ensure the screws tighten in the correct position, place the chair upside down on a flat surface.

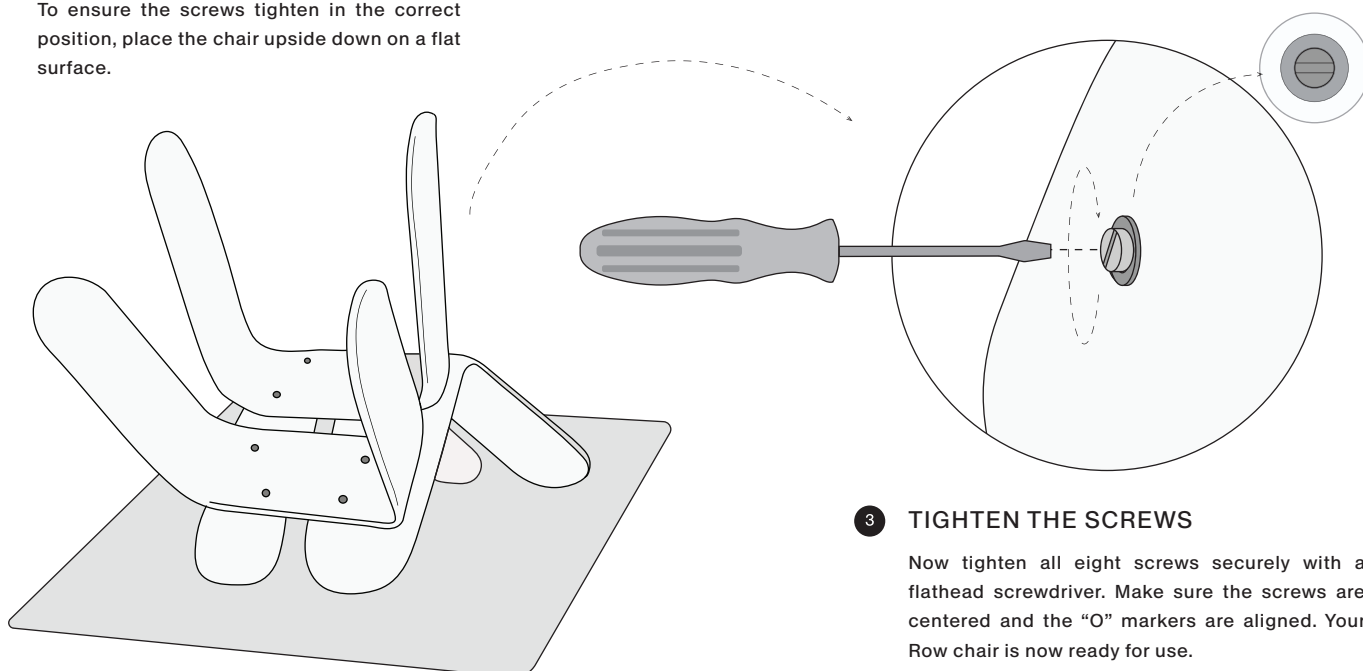

3 TIGHTEN THE SCREWS

Now tighten all eight screws securely with a flathead screwdriver. Make sure the screws are centered and the "O" markers are aligned. Your Row chair is now ready for use.