




KOOIJ BV
KANONNENLOODS 24
1505RX ZAANDAM
THE NETHERLANDS

OFFICE@KOOIJ.COM
KOOIJ.COM

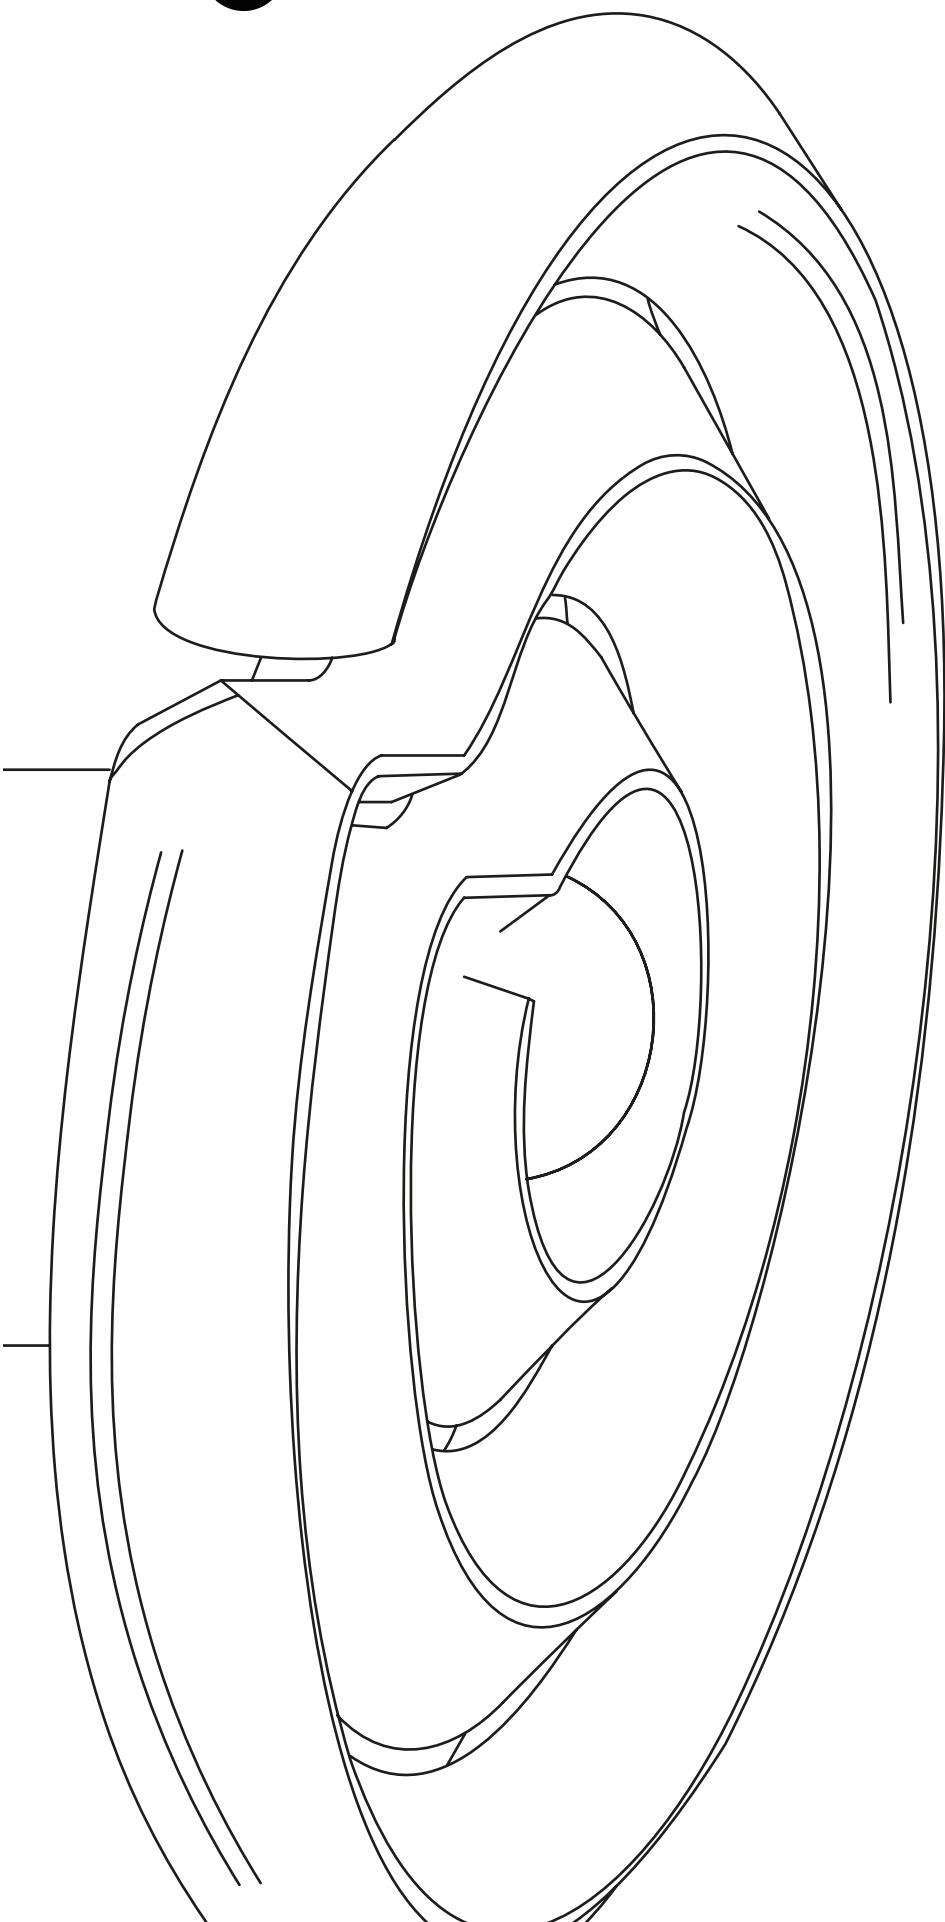

Fresnel wall


INSTALLATION INSTRUCTIONS

Fresnel wall

INSTALLATION INSTRUCTIONS

OVERVIEW


- ① Canopy
- ② Fresnel

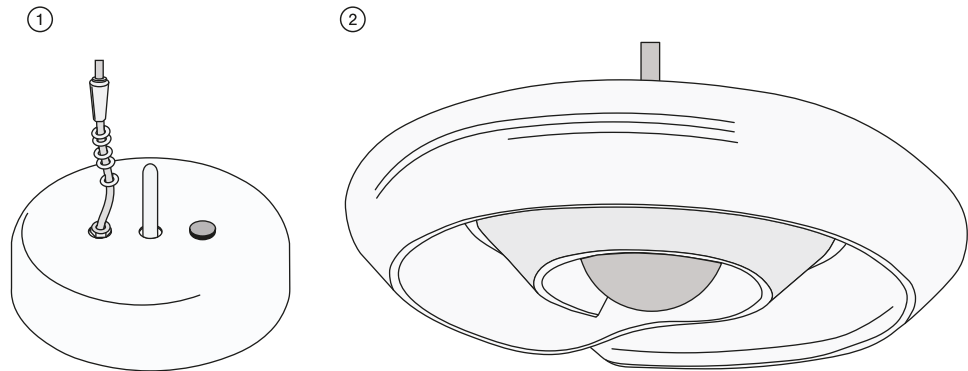

TOOLS & HARDWARE


(Items below are not included)

- ① Flathead screwdriver
- ② cross-head screwdriver
- ③ Hex key
- ④ Screws and plugs
(Suitable for ceiling type & weight)

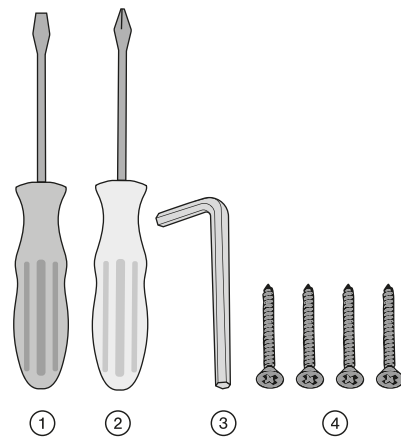


① REMOVE THE COVER OF THE CANOPY

Remove the cover from the canopy by unscrewing the large screw on top. Then, slide the cover over the cord.

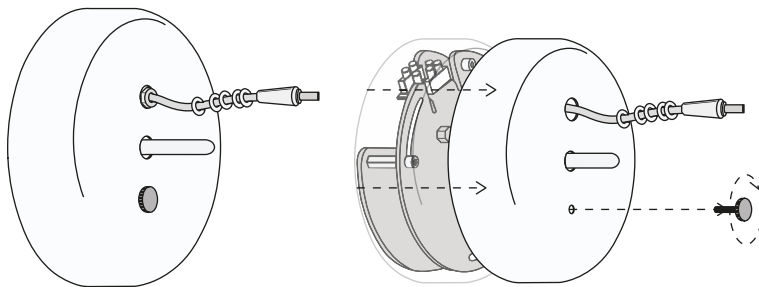

② UNSCREW THE BOLTS


Remove the upper part of the fixture by unscrewing the three bolts on top using a hex key.

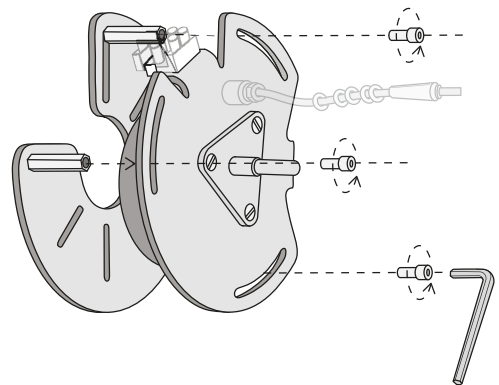

3 ATTACH FIXTURE TO THE WALL


Attach the upper part of the fixture to the wall using suitable plugs and screws for your wall type. Ensure that the main wiring from the wall is centered within the fixture.

Note: screws are not included—use screws and plugs appropriate for your ceiling.

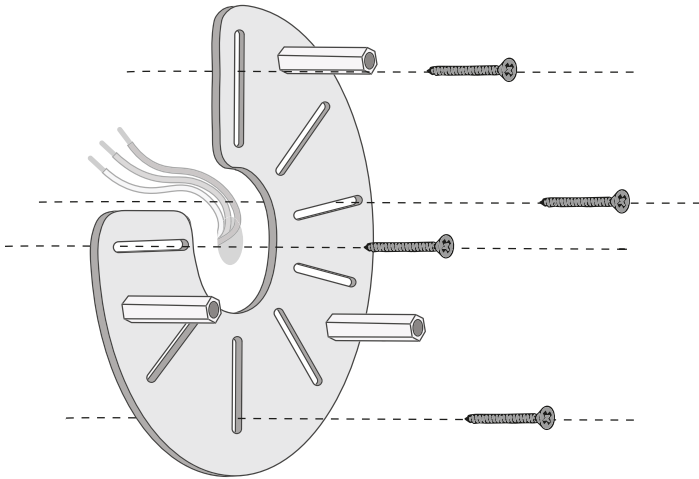

4 SCREW FIXTURE BACK TOGETHER


Using the same three bolts, screw the fixture back together using a hex key. Make sure the opening in the upper part aligns with the part that holds the white terminal block, as shown in the drawing below. Make sure the remaining cord is stored neatly between the two parts again.

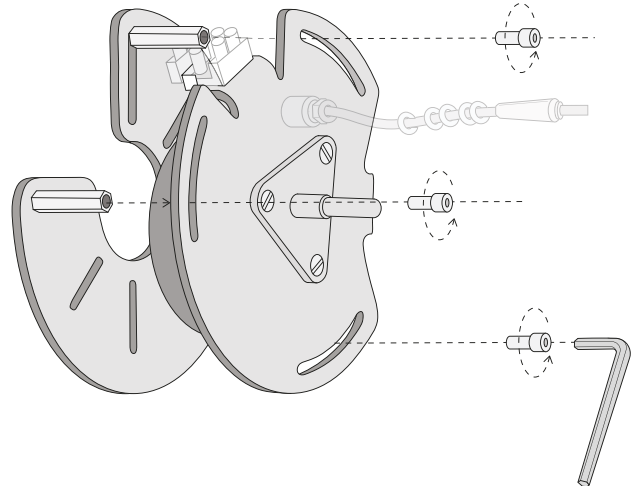

5 CONNECT THE MAIN WIRING

Warning: Always switch off the electricity at the main circuit breaker before starting any electrical work.


Connect your main wiring as usual (L, N, and G) by loosening the screws on the terminal block with a cross-head screwdriver. Insert the wires, then tighten the screws to secure them.

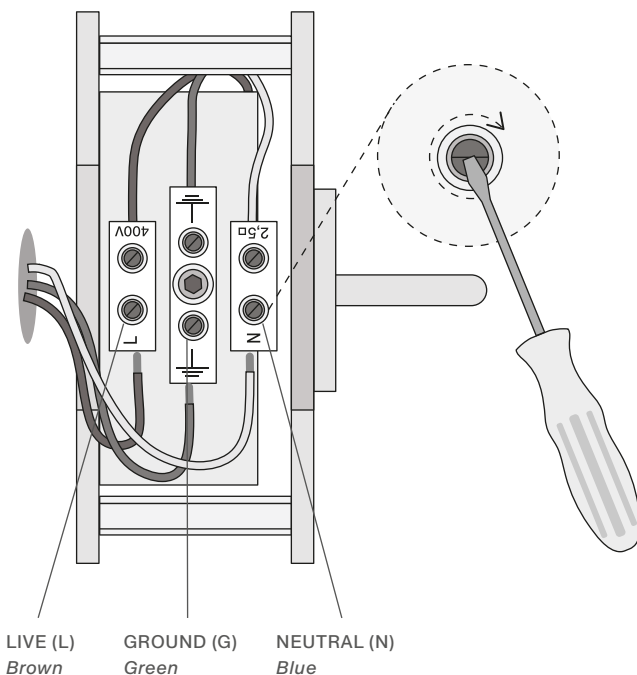


6 CONNECT WIRES FOR DIMMING

Warning: Always switch off the electricity at the main circuit breaker before starting any electrical work.



To enable dimming, connect the two dimming control wires to the black terminal block on the opposite side (0–10V, PWM, or resistance), depending on your setup.

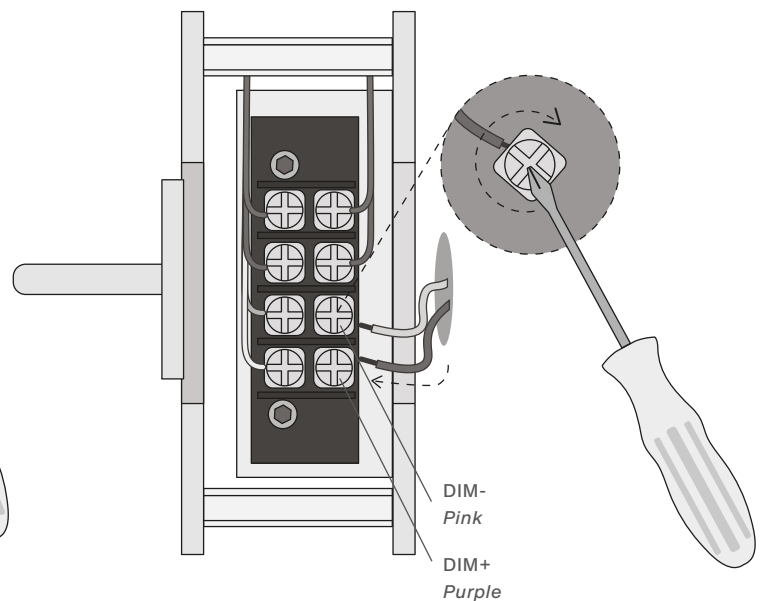

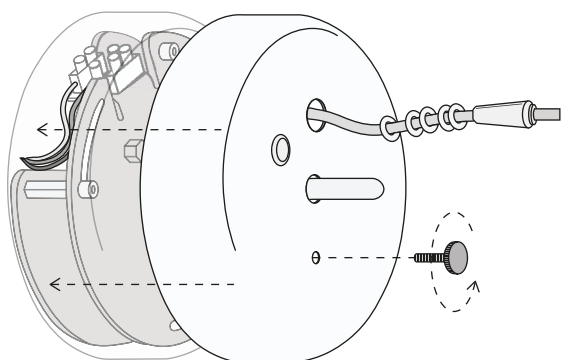


7 PLACE COVER BACK OVER THE FIXTURE

Place the canopy cover back over the fixture. Make sure all wiring is safely tucked in, and the cord passes through the hole in the cover. Screw the cover back in place using the large screw.

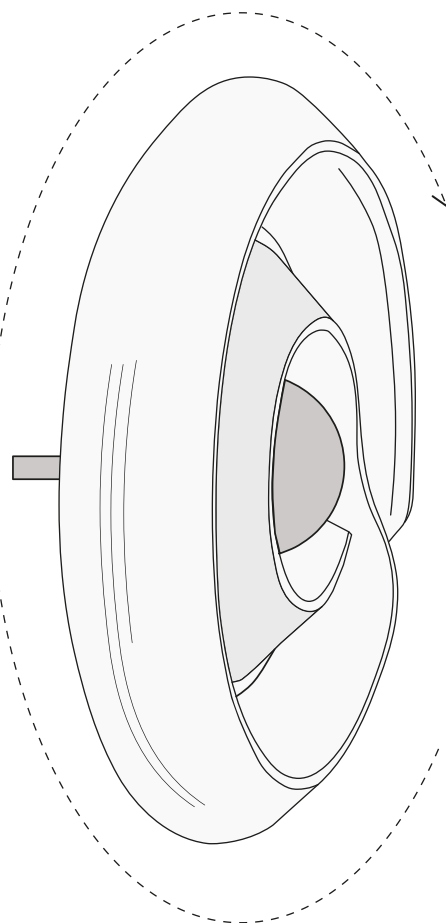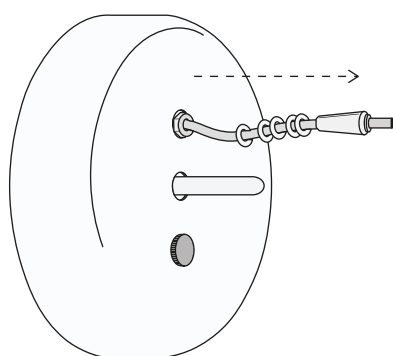

8 SCREW FRESNEL TO THE CANOPY

On the back of the Fresnel, you will find a screw that attaches the fixture to the ball. Place this over the pin coming out of the canopy and screw it in place. Plug the cord into the back of the Fresnel.

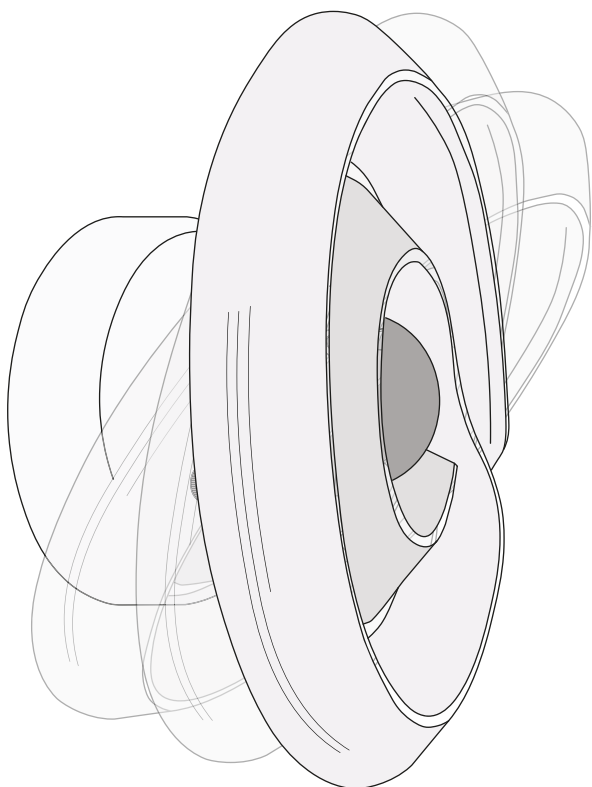

9 ADJUST ANGLE MANUALLY

The Fresnel has a felt ring that creates enough friction to hold it securely on the ball fixture at any angle. Manually adjust the Fresnel to the desired angle.